### IMPORTANT! %0000

Mr. Bucket requires 3 AA batteries (not included).

Batteries should only be installed and replaced by adults, or under adult supervision.

We recommend alkaline batteries for optimum performance.

Batteries are to be installed in the proper polarity.

New and old batteries are not to be mixed.

Batteries of different types are not to be mixed.

Exhausted batteries should be removed.

Remove batteries from the game unit when it is not expected to be in use for several months.

Do not dispose of batteries in fire.

Batteries are to be disposed of per your municipality, state or provincial regulations.

Do not short-circuit the supply terminals.

Do not attempt to power battery products from the main supply and do not insert connecting wires into electrical socket outlets.

# 1.5VAA/R6

#### BATTERIES REQUIRED

1.5V AA/R6 Phillips/cross head screwdriver (not included) required for battery replacement. Alkaline batteries recommended.

### **Pressman**

We appreciate your comments on this game. Please send your correspondence to: custserv@pressman-toy.com

Our Customer Service Department can be reached Monday through Friday (except during holidays) from 10:00 am CST to 4:00 pm CST at 855-258-8214.

© 2017 Pressman Toy Corporation 3701 West Plano Parkway, Suite 100, Plano, TX 75075 Colors and contents may vary from those illustrated. Made in Guangdong, China. Figures or colors may vary. Visit our website at: www.pressmantoy.com

©2017 John Adams Leisure Ltd. Mr Bucket is a registered Trademark. Manufactured under license.

Some assembly required.



origina/
CH

2-4 Players Ages 3 & Up

#### **⚠ WARNING:**

**CHOKING HAZARD**—Smallparts. Not for children under 3 yrs.

Mr. Bucket® is the original moving chasing racing action game. As Mr. Bucket moves around the floor, can you scoop up all your color balls and place them back into Mr. Bucket before he pops them out again?



#### • NOTE TO PARENTS


Mr. Bucket is a battery-operated game, which must only be used with the special balls enclosed. **DO NOT** allow your child to place sand, water, or any objects other than the game balls into Mr. Bucket.

#### **CONTENTS**

Mr. Bucket, 4 shovels (1 of each color), 12 balls (3 of each color)





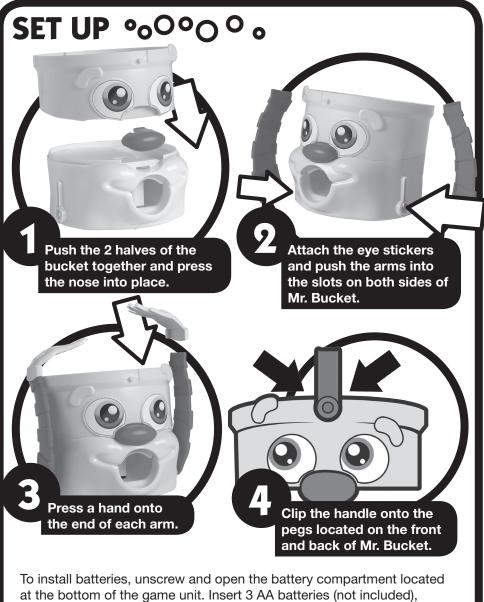

To install batteries, unscrew and open the battery compartment located at the bottom of the game unit. Insert 3 AA batteries (not included), aligning the + and – symbols with the markings on the plastic battery compartment. Replace the battery compartment door and tighten the screw. ADULT SUPERVISION REQUIRED WHEN INSTALLING BATTERIES.

Choose a large, flat, hard surface to play on, that is at least 6 x 6 feet. Scatter the multicolored balls in this area. Avoid carpeted areas.

## HOW TO PLAY %0000 %

Each player chooses a different color shovel and the matching three balls. If there are less than 4 players, place unused shovels and matching color balls out of play. When everyone is ready, one player turns the switch underneath Mr. Bucket to the "ON" position, and places Mr. Bucket on the floor. Get ready – Mr. Bucket will start to move around quickly! Everyone then scoops up a ball that matches his or her colored shovel and drops the ball into Mr. Bucket. Watch out – he may shoot out your ball! If he does, quickly scoop it up and place it back into Mr. Bucket.



Players must keep scooping their matching color balls until they have managed to get all three inside.



Players may **ONLY** pick up their own color balls and **MUST** use their shovel **NOT** their hands.



After a player has dropped their first ball into Mr. Bucket, they must run and scoop another matching ball.



You must hurry as Mr. Bucket will pop balls back out almost as fast as players can drop them in.



# WINNING °°°O°O°° THE GAME °°O°O°°

As soon as a player has managed to get all three of their color balls inside Mr. Bucket, they must quickly lift Mr. Bucket by his handle, which stops him from popping out any more balls.