

For 1 to 4 players
Ages 4 and up



WARNING:

CHOKING HAZARD — Small parts.
Not for children under 3 years.

Let's Go Fishin'™

Game Rules

Object of the Game: To catch as many fish as possible.

Setting up the Game:

Place the 21 fish in each of the individual compartments. Turn the battery switch (located on top of the game base) to the "off" position. Open the battery compartment using a coin or screw driver (next to the battery switch) and insert one size "C" battery in the direction indicated inside the battery compartment. Close the battery compartment once the battery is inside.

Each player takes a fishing pole. Turn the battery switch to the "on" position; the base will start rotating.

Playing the Game: As the game base rotates all players simultaneously try to catch as many fish as possible; one at a time.

Winning the Game: After all the fish have been caught, each player counts the fish they caught. The player with the most fish wins.

We appreciate your comments on this game.
Please address your correspondence to:

Pressman Toy Corp.
Dept: Let's Go Fishin'
121 New England Avenue
Piscataway, NJ 08854

Our Consumer Service number is 1(800) 800-0298.
Calls are accepted Monday through Friday from 10:00 am until 4:00 pm EST.

Pressman®

©2009 Pressman Toy Corporation, New York, NY 10011.

#0055/0710